



Table of Contents

Table of Contents

1	About this document	2
2	About the system	2
2.1	Components in a typical system layout	2
3	Operation	3
3.1	Overview: Operation.....	3
3.2	The user interface at a glance	3
3.2.1	Buttons.....	3
3.2.2	Status icons	3
3.3	Space heating control	4
3.3.1	Setting the space operation mode	4
3.3.2	Using the room temperature home page	4
3.3.3	Using the leaving water temperature home pages (main + additional)	4
3.4	Domestic hot water control	4
3.4.1	Reheat mode	4
3.4.2	Scheduled mode	4
3.4.3	Scheduled + reheat mode	5
3.4.4	Using the DHW tank temperature home page	5
3.4.5	Using the DHW tank booster mode	5
3.5	Schedules: Example.....	5
	To select which schedule you currently want to use...	5
3.6	Menu structure: Overview user settings	6
3.7	Installer settings: Tables to be filled in by installer	7
3.7.1	Quick wizard	7
3.7.2	Space heating control	7
3.7.3	Domestic hot water control [A.4]	7
3.7.4	Contact/helpdesk number [6.3.2]	7
4	Energy saving tips	7
5	Maintenance and service	8
5.1	Overview: Maintenance and service.....	8
5.2	To find the contact/helpdesk number	8
6	Troubleshooting	8
6.1	Symptom: You are feeling too cold (hot) in your living room.....	8
6.2	Symptom: The water at the tap is too cold	8
6.3	Symptom: Heat pump failure	9
7	Glossary	9

1 About this document

Thank you for purchasing this product. Please:

- Read the documentation carefully before operating the user interface to ensure the best possible performance.
- Request the installer to inform you about the settings that he used to configure your system. Check if he has filled in the installer settings tables. If not, request him to do so.
- Keep the documentation for future reference.

Target audience

End users

Documentation set

This document is part of a documentation set. The complete set consists of:


Document	Contains...	Format
General safety precautions	Safety instructions that you must read before operating your system	Paper (in the box of the indoor unit)
Operation manual	Quick guide for basic usage	
User reference guide	Detailed step-by-step instructions and background information for basic and advanced usage	Digital files on the ROTEX website.

Latest revisions of the supplied documentation may be available on the regional ROTEX website or via your installer.

Available screens

Depending on your system layout and installer configuration, not all screens in this document may be available on your user interface.

Breadcrumbs

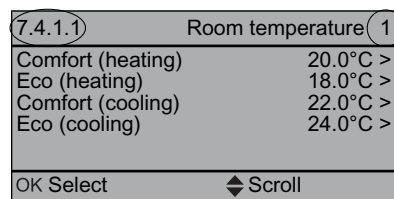

Breadcrumbs help you to locate where you are in the menu structure of the user interface. This document also mentions these breadcrumbs.


Example: Go to [7.4.1.1]: [Menu icon] > User settings > Preset values > Room temperature > Comfort (heating)

2 About the system

Depending on the system layout, the system can:

- Heat up a space
- Produce domestic hot water (if a DHW tank is installed)

2.1 Components in a typical system layout

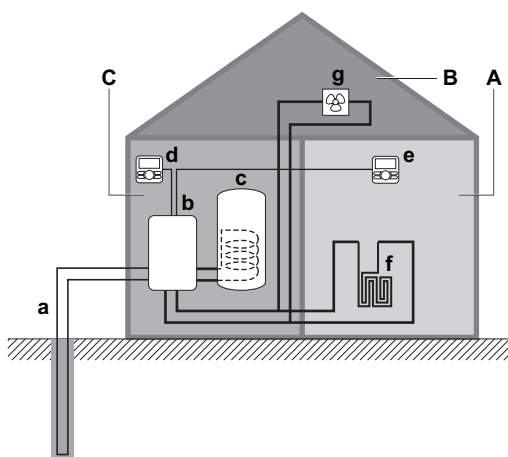

- A** Main zone. **Example:** Living room.
- B** Additional zone. **Example:** Bedroom.
- C** Technical room. **Example:** Garage.
- a** Brine loop
- b** Indoor unit heat pump
- c** Domestic hot water (DHW) tank
- d** User interface at the indoor unit

- e User interface in the living room, used as room thermostat
- f Underfloor heating
- g Heat pump convectors or fan coil units



INFORMATION

The indoor unit and the domestic hot water tank (if installed) can be separated or integrated depending on the indoor unit type.

3 Operation


3.1 Overview: Operation

You can operate the system via the user interface. This part describes how to use the user interface:

Part	Description
At a glance	<ul style="list-style-type: none"> ▪ Buttons ▪ Status icons
Space heating control	How to control space heating: <ul style="list-style-type: none"> ▪ Setting the space operation mode ▪ Controlling the temperature
Domestic hot water control	How to control domestic hot water: <ul style="list-style-type: none"> ▪ Reheat mode ▪ Scheduled mode ▪ Scheduled + reheat mode
Schedules	How to select and program schedules.
Menu structure	Overview of menu structure
Installer settings table	Overview of installer settings

3.2 The user interface at a glance

3.2.1 Buttons

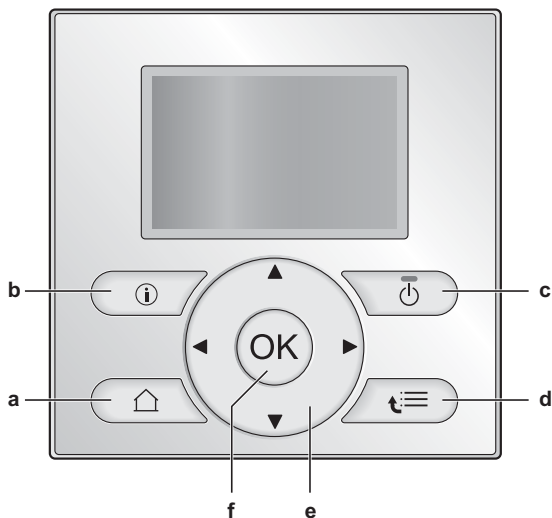

- a HOME PAGES
 - Switches between home pages (when you are on a home page).
 - Goes to the default home page (when you are in the menu structure).
- b MALFUNCTION INFORMATION
If a malfunction occurs, is displayed on the home pages. Press to display more information about the malfunction.
- c ON/OFF
Turns ON or OFF one of the controls (room temperature, leaving water temperature, DHW tank temperature).

- d MENU STRUCTURE/BACK
 - Opens the menu structure (when you are on a home page).
 - Goes up a level (when you are navigating through the menu structure).
 - Goes back 1 step (example: when you are programming a schedule in the menu structure).
- e NAVIGATING/CHANGING SETTINGS
 - Navigates the cursor on the display.
 - Navigates through the menu structure.
 - Changes settings.
 - Selects a mode.
- f OK
 - Confirms a selection.
 - Enters a submenu in the menu structure.
 - Switches between displaying actual and desired values, or between displaying actual and offset values (if applicable) on the home pages.
 - Goes to the next step (when you are programming a schedule in the menu structure).
 - Enables you to activate or deactivate child lock if pressed for more than 5 seconds on a home page.
 - Enables you to activate or deactivate a function lock if pressed for more than 5 seconds in the main menu of the menu structure.



INFORMATION

If you press or while changing settings, the changes will NOT be applied.

3.2.2 Status icons

Icon	Description
	Space operation mode = Heating.
	Not available.
	Unit is operating.
	Desired room temperature = preset value (Comfort; daytime).
	Desired room temperature = preset value (Eco; nighttime).
	<ul style="list-style-type: none"> ▪ On the room temperature home page: Desired room temperature = according to the selected schedule. ▪ On the DHW tank temperature home page: DHW tank mode = Scheduled mode.
	DHW tank mode = Reheat mode.
	DHW tank mode = Scheduled + reheat mode.
	At the next scheduled action, the desired temperature will increase.
	At the next scheduled action, the desired temperature will NOT change.
	At the next scheduled action, the desired temperature will decrease.
	The preset value (Comfort or Eco) or scheduled value is temporarily overruled.
	The system will produce domestic hot water for the indicated number of persons.
	The DHW tank booster mode is active or ready to be activated.
	Quiet mode is active.
	Holiday mode is active or ready to be activated.
	Child lock mode and/or function lock mode is active.

3 Operation

Icon	Description
	An external heat source is active. Example: Gas burner.
	The disinfection mode is active.
	A malfunction occurred. Press to display more information about the malfunction.
	Weather-dependent mode is active.
	User permission level = Installer.
	Defrost/oil return mode is active.
	Hot start mode is active.
	Emergency operation is active.



INFORMATION

Quiet mode is NOT applicable for this unit.

3.3 Space heating control

3.3.1 Setting the space operation mode

About space operation modes

The heat pump is a heating only model. The system can heat up a space, but NOT cool down a space.

3.3.2 Using the room temperature home page

Typical room temperature home pages

Depending on the user profile, the user interface gives you either a basic or a detailed home page. To switch between home pages, go to [7.1.3]: > User settings > Display > User profile.

User profile = Basic	User profile = Detailed
<p>Mon 15:20 Room 20.0°C Actual temperature</p>	<p>Mon 15:20 Room 20.0°C Actual temperature Scheduled Tue 17:30</p>

To read out the actual and desired room temperature

- Go to the room temperature home page (Room).

Result: You can read out the actual temperature.

20.0°C
Actual temperature

- Press **OK**.

Result: You can read out the desired temperature.

22.0°C
Desired temperature

To temporarily overrule the room temperature schedule

- Go to the room temperature home page (Room).
- Use or to adjust the temperature.

To change the mode from scheduled to preset value

Prerequisite: User profile = Detailed.

- Go to the room temperature home page (Room).
- Press or to select a preset value (⊙ or ◐).

Result: The mode will return to Scheduled according to the overrule period.

To set the overrule period

- Go to [7.2]: > User settings > Temperature lock.
- Select a value and press **OK**:
 - Permanent
 - hours (2, 4, 6, 8)

3.3.3 Using the leaving water temperature home pages (main + additional)



INFORMATION


The leaving water is the water that is sent to the heat emitters. The desired leaving water temperature is set by your installer in accordance with the heat emitter type. **Example:** Underfloor heating is designed for lower leaving water temperature than radiators and heat pump convectors and/or fan coil units. You only have to adjust leaving water temperature settings in case of problems.

For more information about the leaving water temperature, see the user reference guide.

3.4 Domestic hot water control

3.4.1 Reheat mode

In reheat mode (⊙), the DHW tank continuously heats up to the temperature shown on the DHW tank temperature home page (example: 50°C).

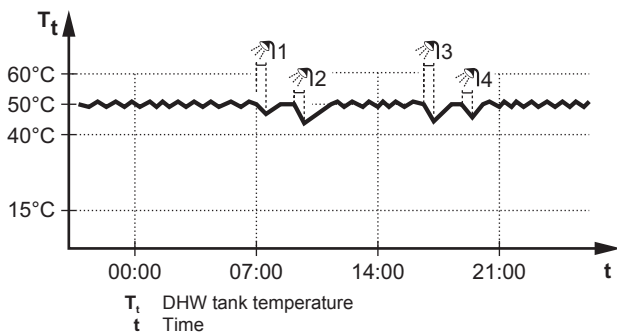


3.4.2 Scheduled mode

In scheduled mode (⊕), the DHW tank produces hot water corresponding to a schedule. The best time to allow the tank to produce hot water is at night, because:

- The space heating demand is lower
- Electricity tariffs are lower


Example:

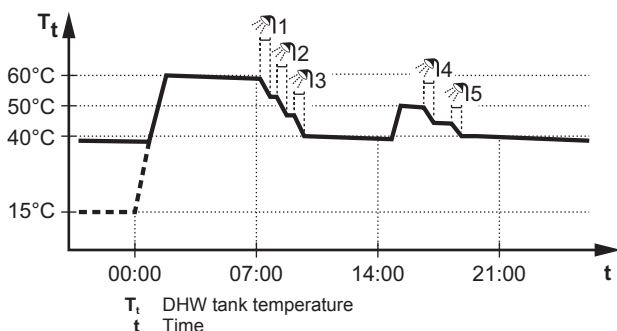

3.4.3 Scheduled + reheat mode

In scheduled + reheat mode (☉ ☉), the domestic hot water control is the same as in scheduled mode. However, when the DHW tank temperature drops below a preset value (=reheat tank temperature – hysteresis value = [6-0C]–[6-08]; example: 35°C), the DHW tank heats up until it reaches the reheat set point ([6-0C]; example: 45°C). This ensures that a minimum amount of hot water is available at all times.

Example:

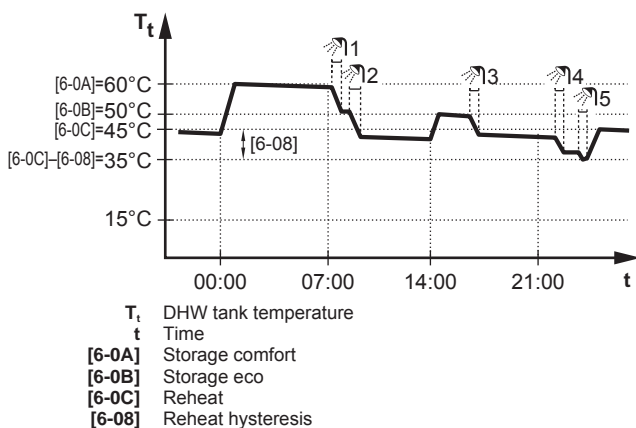

3.4.4 Using the DHW tank temperature home page

Typical DHW tank temperature home pages

Depending on the user profile, the user interface gives you either a basic or a detailed home page. Depending on an installer setting, either an actual temperature or a number of people is displayed to indicate the domestic hot water tank temperature. The examples in the illustrations below are in DHW tank mode = Scheduled.

User profile = Basic	User profile = Detailed
<p>Mon 15:20 Tank</p> <p>60°C</p> <p>Desired temperature</p>	<p>Mon 15:20 Tank</p> <p>60°C</p> <p>Storage comfort</p> <p>Tue 00:00</p>
<p>Mon 15:20 Tank</p> <p>4</p> <p>Desired temperature</p>	<p>Mon 15:20 Tank</p> <p>4</p> <p>Storage comfort</p> <p>Tue 00:00</p>

To read out and adjust the desired reheat temperature (in scheduled and reheat mode)

- Go to [7.4.3.3]: ☰ > User settings > Preset values > Tank temperature > Reheat.
Result: You can read out the desired reheat temperature.
- Press ▲ or ▼ to adjust.

To read out and overrule the active or next scheduled desired temperature (in scheduled mode or scheduled + reheat mode)

- Go to the DHW tank temperature home page (Tank).
Result: 60°C or 4 is displayed.
- Press ▲ or ▼ to overrule. **Note:** If the desired temperature is weather dependent, you cannot change it on the home page.

3.4.5 Using the DHW tank booster mode

To activate the DHW tank booster mode (method 1)

- Go to the DHW tank temperature home page (Tank).
- Press [OK] for more than 5 seconds.

To activate the DHW tank booster mode (method 2)

Prerequisite: User profile = Detailed

- Go to the DHW tank temperature home page (Tank).
- Press [OK] to select ☰.

3.5 Schedules: Example



INFORMATION

The procedures to program other controls are similar.

In this example:

- Room temperature schedule in heating mode
- Monday = Tuesday = Wednesday = Thursday = Friday
- Saturday = Sunday

To program the schedule

- Go to [7.3.1.1]: ☰ > User settings > Set schedules > Room temp. > Set heating schedule.
- Select Empty and press [OK].
- Program the schedule for Monday. See below for more details.
- Copy from Monday to Tuesday, Wednesday, Thursday and Friday. See below for more details.
- Program the schedule for Saturday.
- Copy from Saturday to Sunday.
- Save the schedule and give it a name. See below for more details.

To program the schedule for Monday

- Use ▲ and ▼ to select Monday.
- Press [OK] to enter the schedule for Monday.
- Program the schedule for Monday:
 - Use ▲ and ▼ to select an entry.
 - Use ▲ and ▼ to change the value of an entry.

To copy from one day to another

- Select the day from which you want to copy and press [OK]. **Example:** Monday.
- Select Copy day and press [OK].
- Set the days you want to copy to Yes and press [OK]. **Example:** Tuesday = Yes, Wednesday = Yes, Thursday = Yes and Friday = Yes.

To save the schedule


- Press [OK], select Save schedule and press [OK].
- Select User defined 1, User defined 2 or User defined 3 and press [OK].
- Change the name and press [OK]. (Only applicable for room temperature schedules). **Example:** MyWeekSchedule

To select which schedule you currently want to use

- Go to [5]: ☰ > Select schedules.
- Select for which control you want to use a schedule. **Example:** [5.1] Room temperature.
- Select for which operation mode you want to use a schedule. **Example:** [5.1.1] Heating.
- Select a predefined or user-defined schedule and press [OK].

3 Operation

3.6 Menu structure: Overview user settings

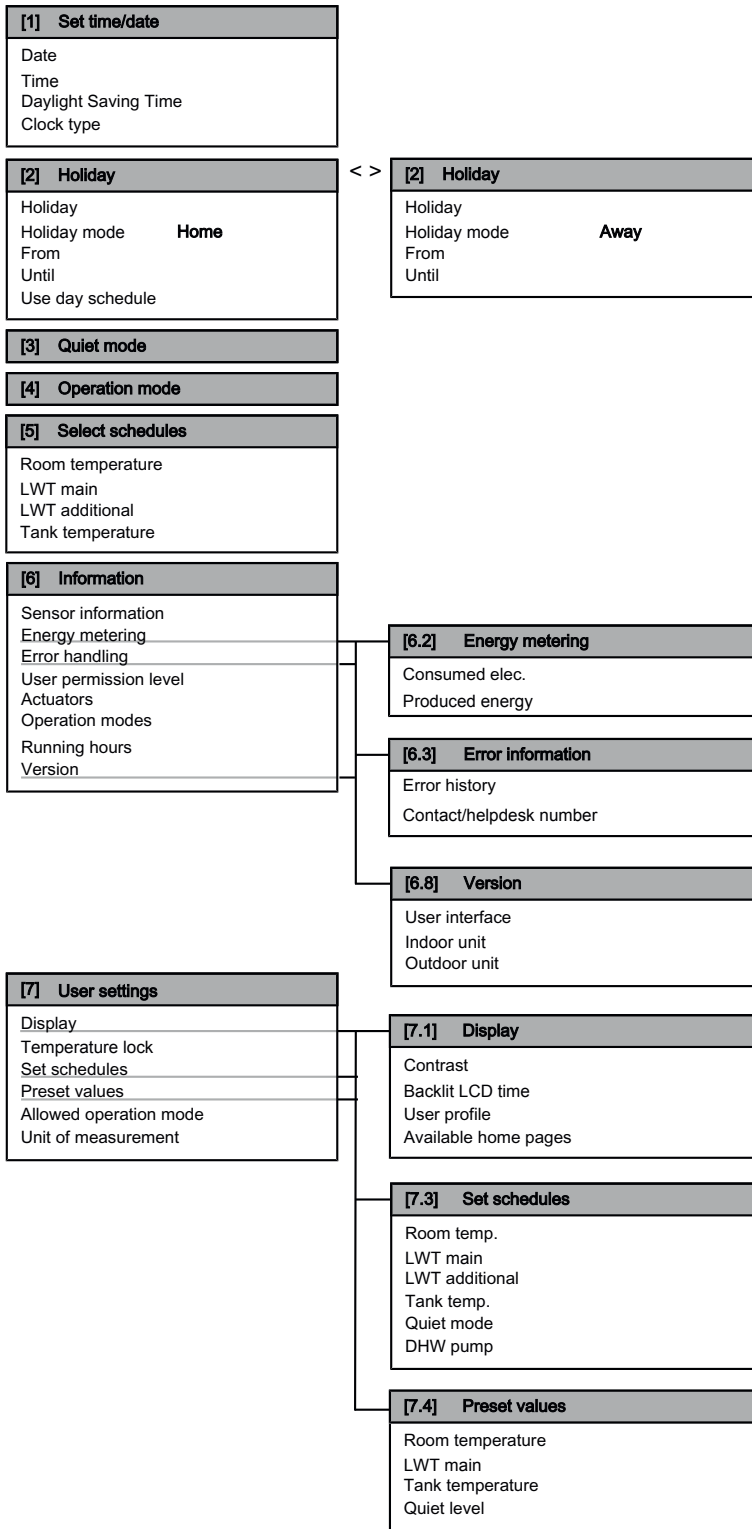



INFORMATION

Energy metering functionality is NOT applicable and/or NOT valid for this unit if it is calculated by the unit. If optional external meters are used, energy metering display is valid.



INFORMATION

Quiet mode and quiet level is NOT applicable for this unit.



INFORMATION

- Indoor unit relates to indoor unit PCB which controls the hydraulic part of the ground source heat pump.
- Outdoor unit relates to outdoor unit PCB which controls the compressor module of the ground source heat pump.

3.7 Installer settings: Tables to be filled in by installer

3.7.1 Quick wizard

Setting	Default	Fill in...
Preferential kWh rate power supply [A.2.1.6]		
Preferential kWh rate	0 (No)	
Space heating settings [A.2.1]		
Unit control method	0 (LWT control)	
User interface location	1 (In room)	
Number of LWT zones	0 (1 LWT zone)	
Pump operation mode	1 (Sample)	
Domestic hot water settings [A.2.2]		
DHW pump	0 (No)	
Thermostats [A.2.2]		
Contact type main	1 (Thermo ON/OFF)	
Contact type add.	1 (Thermo ON/OFF)	
External sensor	0 (No)	
Digital I/O PCB [A.2.2.6]		
Ext. backup heat src	0 (No)	
Alarm output	0 (Normally open)	
Demand PCB [A.2.2.7]		
Demand PCB	0 (No)	
Energy metering [A.2.2]		
External kWh meter 1	0 (No)	
External kWh meter 2	0 (No)	
Capacities (energy metering) [A.2.3]		
BUH: step 1	3 kW	
BUH: step 2	3 kW	
Auto emergency [A.5.1.2]		
Auto emergency operation	Manual	



INFORMATION

Auto emergency: By default, backup heater operation during emergency operation is NOT allowed. This means that when a heat pump failure occurs the user needs to manually confirm that backup heater may operate during emergency. If the house is unattended for longer periods, we recommend that setting [A.5.1.2] Auto emergency operation shall be set to Automatic.

3.7.2 Space heating control

Setting	Default	Fill in...
Leaving water temperature: Main zone [A.3.1.1]		
LWT setpoint mode	1 (Weather dep.)	
Set weather-dependent heating	-20/15/60/25	
Leaving water temperature: Additional zone [A.3.1.2]		
LWT setpoint mode	1 (Weather dep.)	
Set weather-dependent heating	25/60/15/-20	
Leaving water temperature: Delta T emitter [A.3.1.3]		
Heating	8°C	
Leaving water temperature: Modulation [A.3.1.1.5]		
Modulated LWT	0 (No)	
Leaving water temperature: Emitter type [A.3.1.1.7]		
Emitter type	0 (Quick)	

3.7.3 Domestic hot water control [A.4]

Setting	Default	Fill in...
Type	1 (Reheat + sched.)	
Setpoint readout type	0 (Temperature)	
Maximum setpoint	60°C	

3.7.4 Contact/helpdesk number [6.3.2]

Setting	Default	Fill in...
Contact/helpdesk number	—	

4 Energy saving tips

Tips about room temperature

- Make sure the desired room temperature is NEVER too high, but ALWAYS according to your actual needs. Each saved degree can save up to 6% of heating costs.
- Do NOT increase the desired room temperature to speed up space heating. The space will NOT heat up faster.
- When your system layout contains slow heat emitters (example: under floor heating), avoid large fluctuation of the desired room temperature and do NOT let the room temperature drop too low. It will take more time and energy to heat up the room again.
- Use a weekly schedule for your normal space heating needs. If necessary, you can easily deviate from the schedule:
 - For shorter periods: You can overrule the scheduled room temperature. **Example:** When you have a party, or when you are leaving for a couple of hours.
 - For longer periods: You can use the holiday mode. **Example:** When you stay at home during your holiday, or when you go away during your holiday.

5 Maintenance and service

Tips about DHW tank temperature

- Make sure the number (available hot water for x persons) on the DHW tank temperature home page is NOT higher than your actual needs.
- Use a weekly schedule for your normal domestic hot water needs (only in scheduled mode).
 - Program to heat up the DHW tank to a preset value (Storage comfort = higher DHW tank temperature) during the night, because then space heating demand is lower and electric tariffs may be lower.
 - If heating up the DHW tank once at night is not sufficient, program to additionally heat up the DHW tank to a preset value (Storage eco = lower DHW tank temperature) during the day.
- Make sure the desired DHW tank temperature is NOT too high. **Example:** After installation, lower the DHW tank temperature daily by 1°C and check if you still have enough hot water.
- Program to turn ON the domestic hot water pump only during periods of the day when instant hot water is necessary. **Example:** In the morning and evening.

5 Maintenance and service

5.1 Overview: Maintenance and service

The installer has to perform a yearly maintenance. You can find the contact/helpdesk number via the user interface.

As end user, you have to:

- Keep the user interface clean with a soft damp cloth. Do NOT use any detergents.
- Regularly check if the water pressure indicated on the manometer is above 1 bar.

Refrigerant


This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do NOT vent gases into the atmosphere.

Refrigerant type: R410A

Global warming potential value: 1975

Periodical inspections for refrigerant leaks may be required depending on the applicable legislation. Please contact your installer for more information.

5.2 To find the contact/helpdesk number

Go to [6.3.2]:  > Information > Error handling > Contact/helpdesk number.

6 Troubleshooting

6.1 Symptom: You are feeling too cold (hot) in your living room

Possible cause	Corrective action
The desired room temperature is too low (high).	Increase (decrease) the desired room temperature. If the problem recurs daily, do one of the following: <ul style="list-style-type: none"> Increase (decrease) the room temperature preset value. Adjust the room temperature schedule.
The desired room temperature cannot be reached.	Increase the desired leaving water temperature in accordance with the heat emitter type.

6.2 Symptom: The water at the tap is too cold

Possible cause	Corrective action
You ran out of domestic hot water because of unusual high consumption.	If you immediately need domestic hot water, activate the DHW tank booster mode. However, this consumes extra energy.
The desired DHW tank temperature is too low.	If you can wait, overrule (increase) the active or next scheduled desired temperature so that more hot water will be produced exceptionally. If the problems recurs daily, do one of the following: <ul style="list-style-type: none"> Increase the DHW tank temperature preset value. Adjust the DHW tank temperature schedule. Example: Program to additionally heat up the DHW tank to a preset value (Storage eco = lower tank temperature) during the day.

6.3 Symptom: Heat pump failure

When the heat pump fails to operate the backup heater can serve as an emergency heater and either automatically or non-automatically take over the heat load. When auto emergency is activated and a heat pump failure occurs, the backup heater will automatically take over the heat load. When a heat pump failure occurs and auto emergency is not activated, the domestic hot water and space heating operations will stop and need to be recovered manually. The user interface will then ask you to confirm whether the backup heater can take over the heat load or not. When the heat pump fails, ⓘ will appear on the user interface.

Possible cause	Corrective action
Heat pump is damaged.	<ul style="list-style-type: none"> ▪ Press ⓘ to view a description of the problem. ▪ Press ⓘ again. ▪ Select OK to allow the backup heater to take over the heat load. ▪ Call your local dealer to get the heat pump fixed.



INFORMATION

When the backup heater takes over the heat load, electricity consumption will be considerably higher.



7 Glossary



DHW = Domestic hot water

Hot water used, in any type of building, for domestic purposes.

LWT = Leaving water temperature

Water temperature at the water outlet of the heat pump.

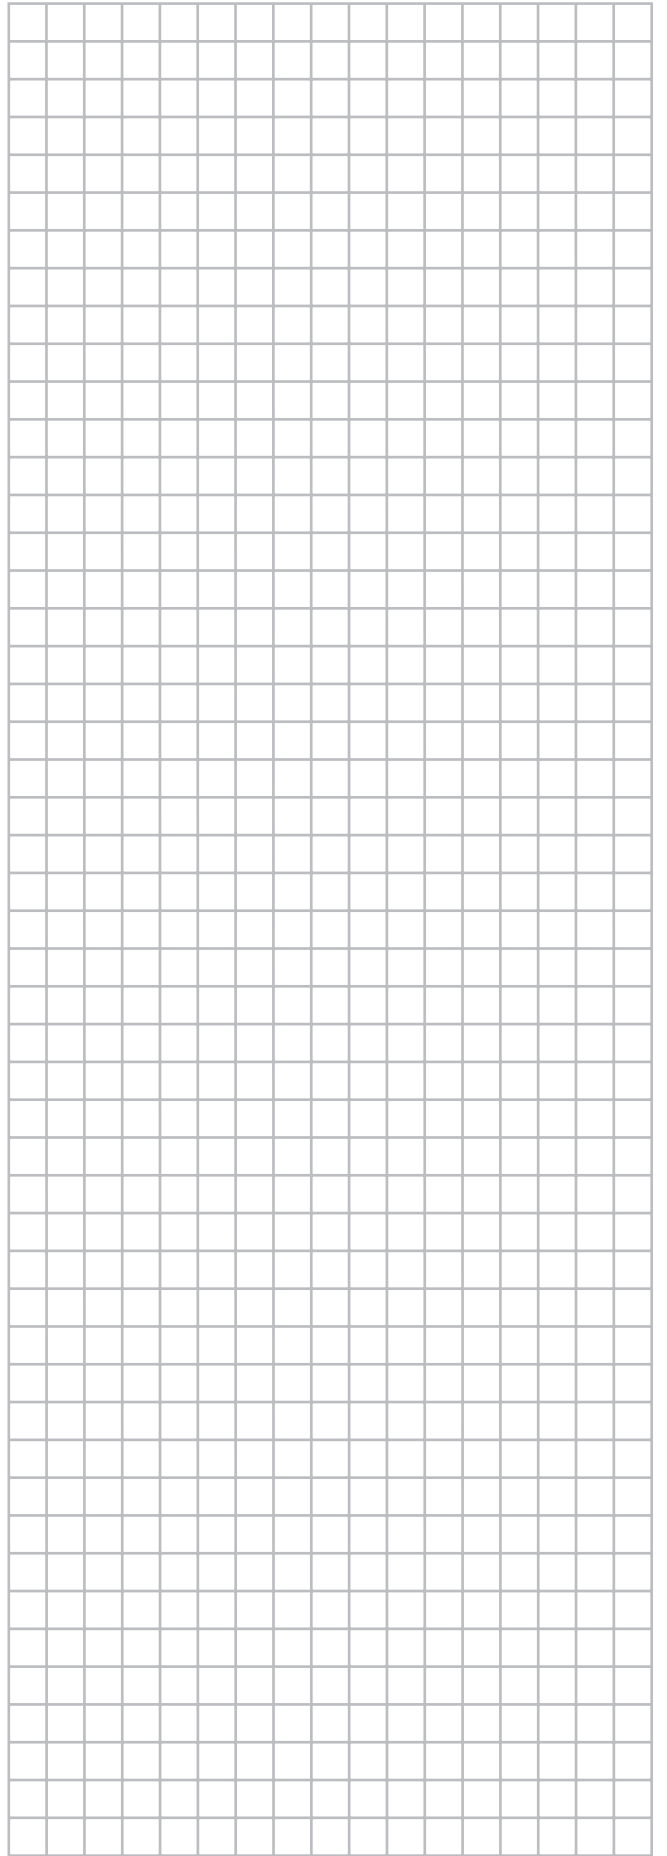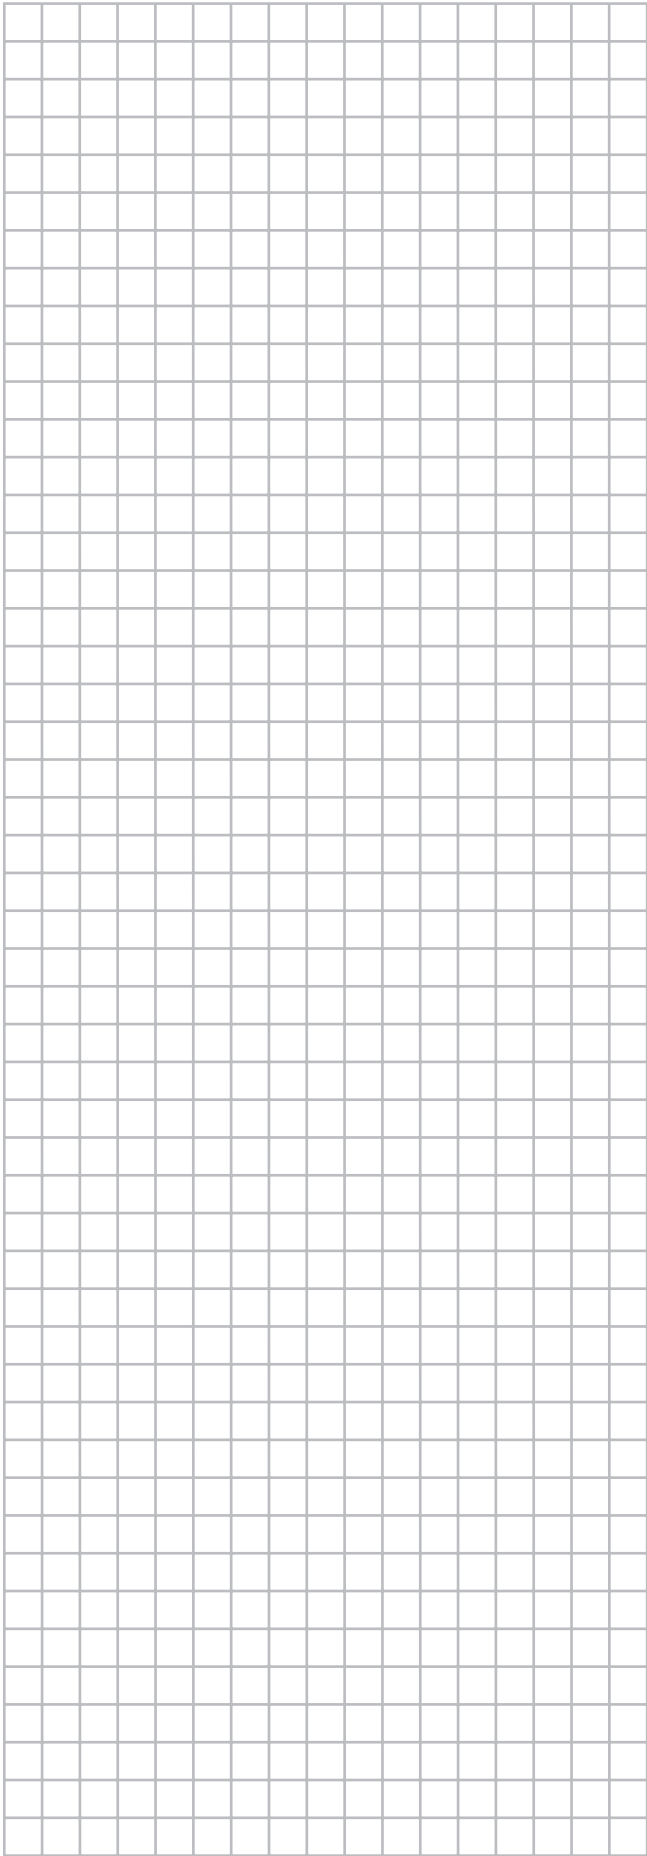

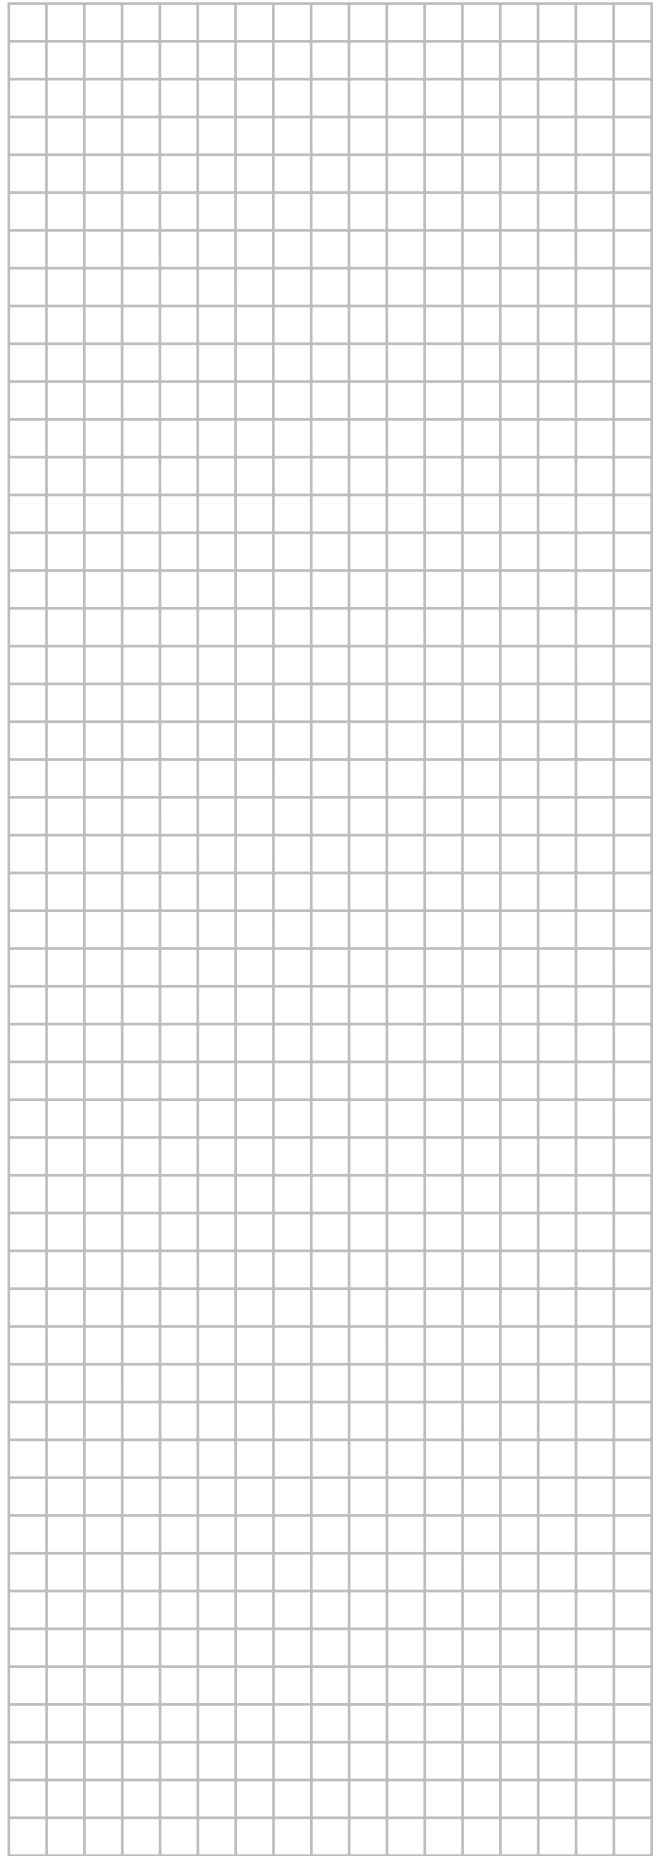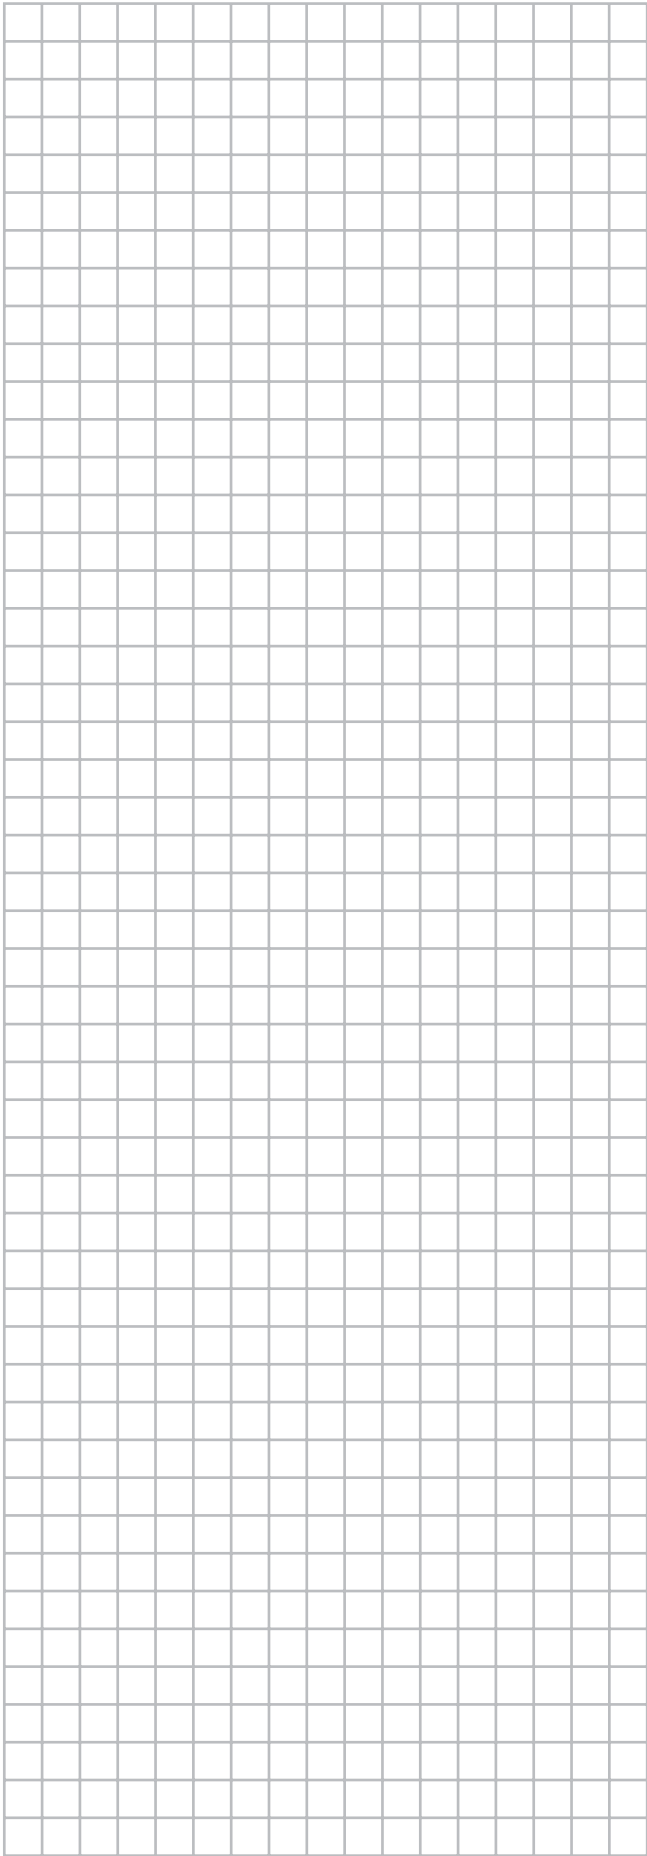



4P353880-1 000000P

ROTEX

Ⓓ **ROTEX Heating Systems GmbH**
Langwiesenstraße 10 · D-74363 Güglingen
Fon +49(7135)103-0 · Fax +49(7135)103-200
e-mail info@rotex.de www.rotex.de

ⒼⒷ **ROTEX** products distributed
in the United Kingdom by:

DAIKIN AIRCONDITIONING UK Ltd.

The Heights, Brooklands, Weybridge, Surrey KT 13 ONY
Tel. +44 845 645 641 9000 · Fax +44 845 641 9009
www.daikin.co.uk

Ⓘ In Italia i prodotti **ROTEX**
sono commercializzati tramite:

DAIKIN AIRCONDITIONING ITALY S.p.A.

Sede operativa

Via Milano, 6 - 20097 San Donato Milanese MI-Italy
Tel. +39 02 51619.1 · Fax +39 02 51619222
e-mail info@rotexitalia.it · www.rotexitalia.it
Numero verde ROTEX 800-886699

Ⓕ **ROTEX** Représenté
en France par:

ROTEX Heating Systems SARL

1, rue des Artisans · F-68280 Sundhoffen
Tel. +33 (0)3 89 21 74 70 · Fax +33 (0)3 89 21 74 74
e-mail info@rotex.fr · www.rotex.fr

Ⓑ **ROTEX**
Vertegenwoordigd in België door:
Représenté en Belgique par:

DAIKIN AIRCONDITIONING BELGIUM NV

Avenue Franklin 1B · B-1300 Wavre
Tel. +32 (0)10 23 72 23 · Fax +32 (0)10 24 49 10
e-mail info@daikin.be · www.daikin.be

Ⓔ En España los productos
ROTEX se comercializan por:

DAIKIN AIRCONDITIONING SPAIN

Calle Labastida 2 · E-28034 Madrid
Tel. +34 91 334 5600 · Fax +34 91 334 5630
e-mail marketing@daikin.es · www.daikin.es

Errors and technical changes reserved 03/2014