




# OPERATION MANUAL

Before using your air conditioner, please read this operating manual carefully and keep it for future reference.

Part No.: R08019028787  
OM-G8-0906-DAIKIN




# G8 Remote Controller Indication

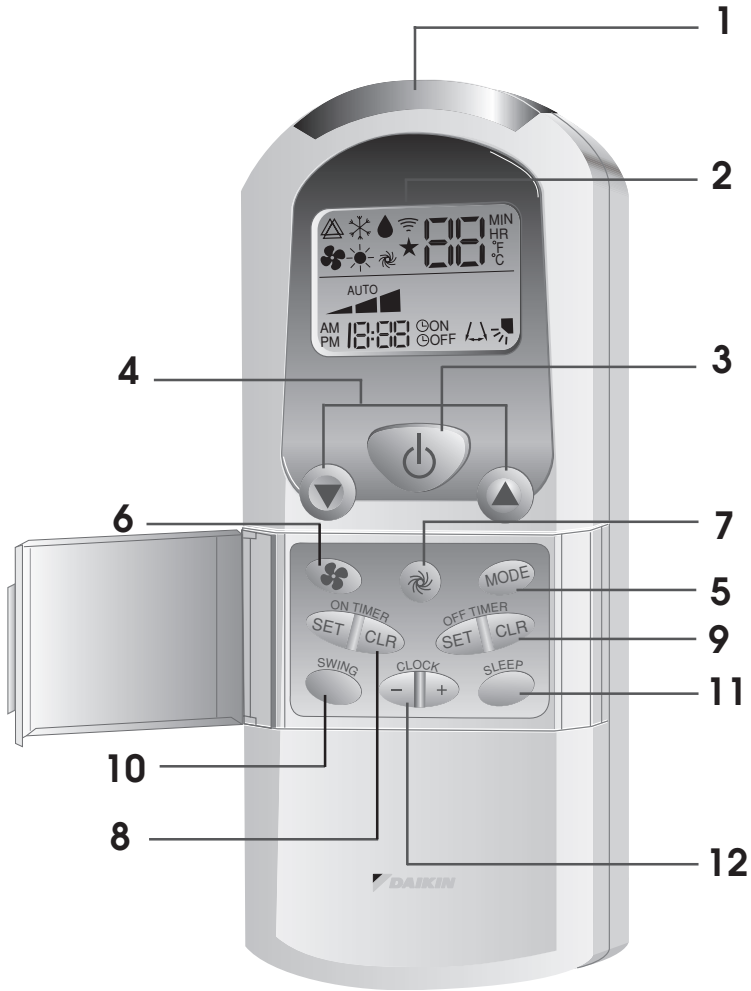

## HOW TO MOUNT ONTO THE WALL




## TO INSERT BATTERIES

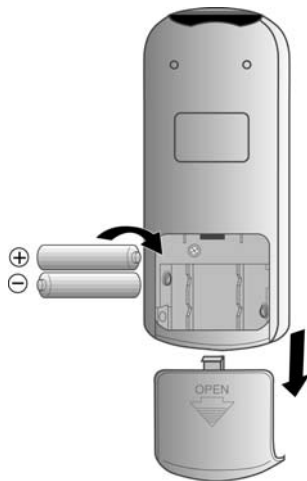

# OPERATING GUIDE

- 1. Transmission source**
  - The source where the signal will be transmitted.
- 2. Signal transmission indication**
  - Blink to confirm that the last setting has been transmitted to the unit.
- 3. "ON/OFF" Button**
  - Press once to start the air conditioner unit.
  - Press again to stop the unit.
- 4. Temperature setting**
  - To set the desired room temperature, press the ▲ or ▼ button to increase or decrease the set temperature.
  - The temperature setting range is from 16°C to 30°C (Optional setting 18°C to 30°C.)
  - Press both buttons simultaneously to toggle ▲ and ▼ from °C to °F setting.
- 5. Operation mode**
  - Press the **MODE** button to select the type of operating mode.
  - For cooling only unit, the available modes are: **COOL** (✱), **DRY** (●) & **FAN** (☼).
  - For heat pump unit, the available modes are: **AUTO** (△), **COOL** (✱), **DRY** (●), **FAN** (☼) & **HEAT** (☼).
- 6. Fan speed selection**
  - Press the ☼ button continuously will toggle the fan speed in the following order:  
Low → Med → High → Auto
  - Stop pressing when the desired fan speed appears on the display screen.
- 7. Turbo function (optional - only applicable to Inverter unit)**
  - Press ☼ for fast cooling or heating operation.
  - The temperature will be increased internally if it is in **HEAT** mode, decreased if in **COOL** or **DRY** mode.  
Fan speed will be increased if it is not at maximum speed.
  - The temperature & fan speed will resume to user setting if ☼ is pressed again or after 20 minutes.
  - Available under **HEAT**, **COOL** & **DRY** modes only.
- 8. ON timer setting**
  - Press the **SET** button will activate the on timer function.
  - Set the desired on time by pressing the **SET** button continuously. If the timer is set to 7.30am, the air conditioner will turn on at 7.30am sharp.
  - Press the **CLR** button to cancel the on timer setting.
- 9. OFF timer setting**
  - Press the **SET** button will activate the off timer function.
  - Set the desired off time by pressing the **SET** button continuously.
  - Press the **CLR** button to cancel the off timer setting.
- 10. Automatic air swing (optional)**
  - Press the **SWING** button to activate the automatic air swing function.
  - To distribute the air to a specific direction, press the **SWING** button and wait until the louver move to the desired direction and press the button once again.
- 11. Sleep mode setting**
  - Press the **SLEEP** button will activate the sleep mode function.
  - This is an energy saving option. When the unit is operating under cooling mode, the set temperature is increased by 0.5°C after the first half an hour, 1°C after the second half an hour and total of 2°C after the following 1 hour. This function will prevent excessive cooling during summer season.
  - When the unit is operating under heating mode, the set temperature is decreased by 1°C after the first half an hour, 2°C after the second half an hour and total of 3°C after the following 1 hour. This function will prevent night sweat during summer season.
  - This function is available under **COOL**, **HEAT** & **AUTO** mode.
- 12. Clock time setting**
  - Press ▲ button to increase the clock time.
  - Press ▼ button to decrease the clock time.

\*NOTE: **AUTO** (△) mode is not applicable for Chilled Water unit.

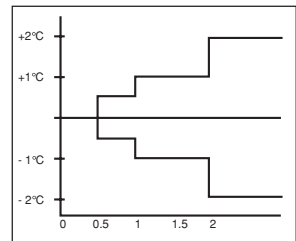

# MEMO



- In the event that there is any conflict in the interpretation of this manual and any translation of the same in any language, the English version of this manual shall prevail.
- The manufacturer reserves the right to revise any of the specification and design contain herein at any time without prior notification.

---

**OYL MANUFACTURING COMPANY SDN. BHD.**

JALAN PENGAPIT 15/19, P.O. BOX 7072, 40702 SHAH ALAM, SELANGOR DARUL EHSAN, MALAYSIA.